


stopper knot version	R-d	R-e
05m	670	600
07m	920	600
09m	1230	600
11m	1350	600
13m	1560	600
15m	1690	600
17m	1850	600
20m	2180	600

Rd and Re from the table above are the measurements in mm for the rear bridle triangle **Rd**, and rear attachment lines **Re**. these are the complete individual line lengths including closed larks head at either end if required.

To modify to take a single pulley rear bridle simply make up a new rear triangle from suitable 3mm Dyneema cored rope. Attach a pulley to the current rear pigtail line and re-assemble. The stopper knot should sit 1-2cm directly behind the pulley when the pulley is equidistant from both ends of the rear triangle. Moving the stopper away from the pulley decreases the directness of the handling feel.

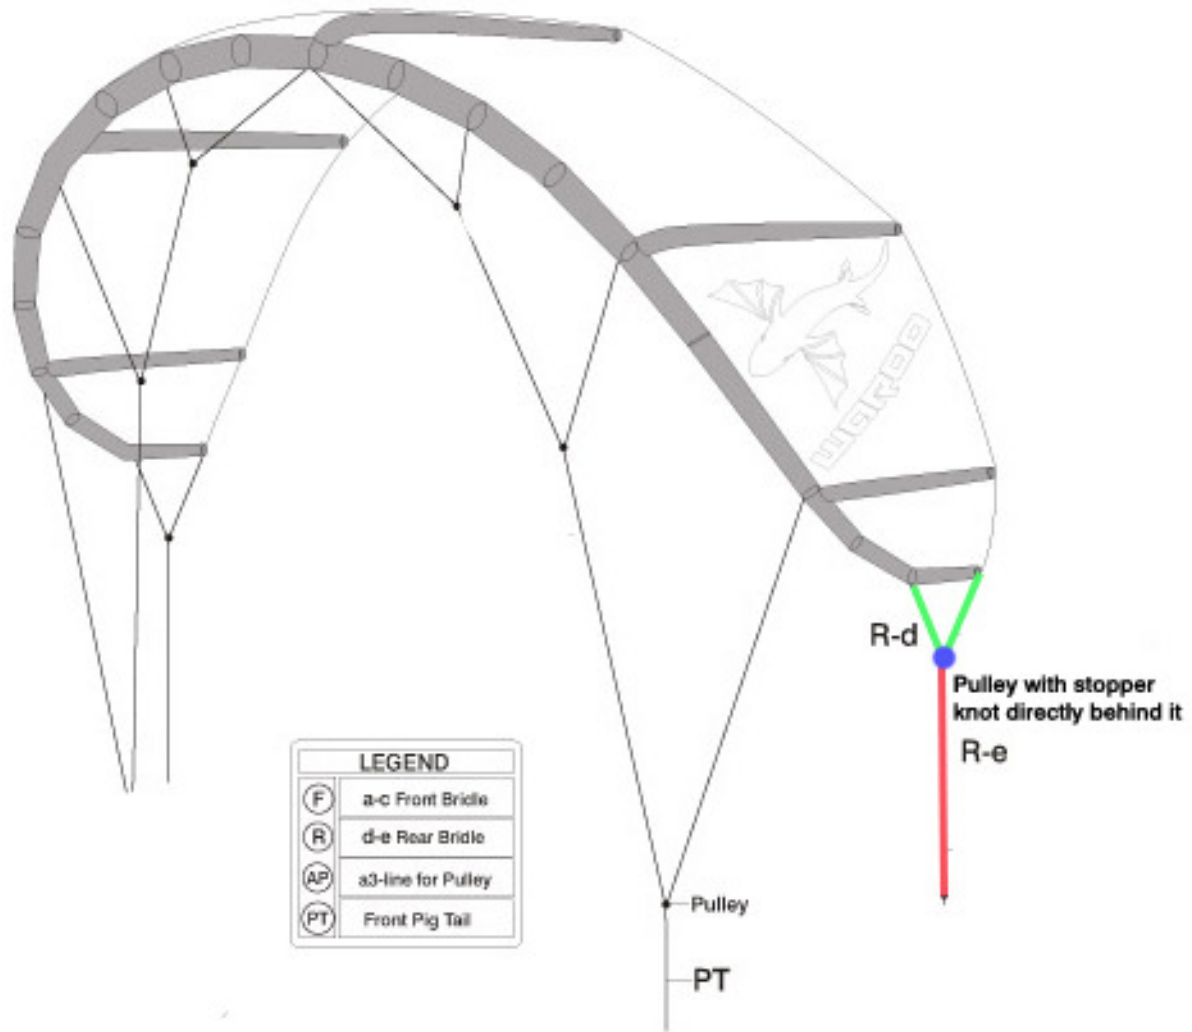

If you have any questions just give me a call.