


## EZ-Pump™ repair kit contents:

- 1x User manuals download note.
- 1 x Soft silicon rubber EZ-Pump inflation tube (enough for two replacements).
- 4 x Small zip-ties.
- 2x Click-valves.

## Instructions for use:

Required tools: Pliers, sharp knife.

1. Using pliers, crush and remove zip ties from EZ-Pump inflation hose.

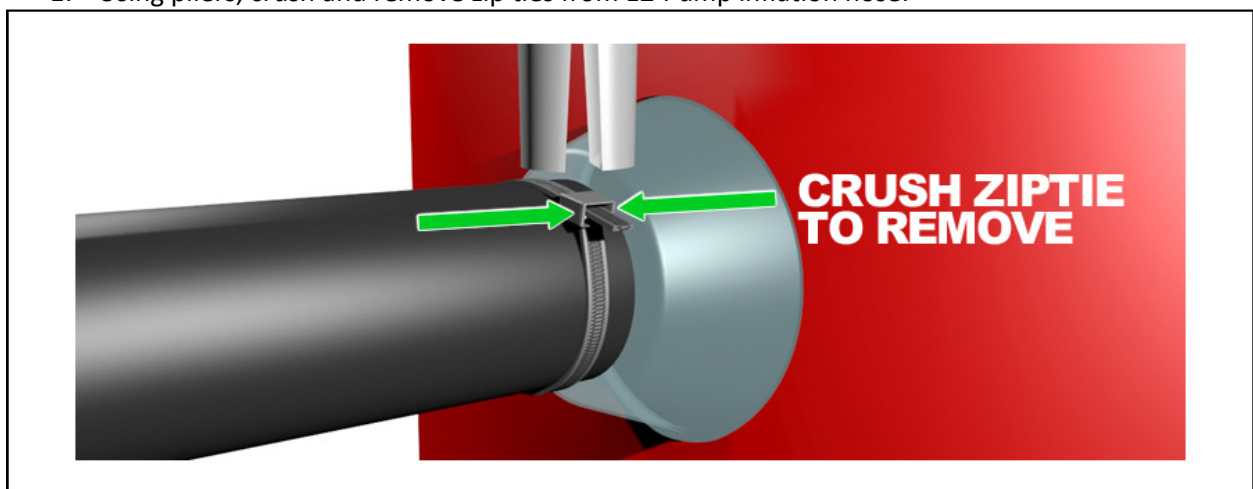


2. Pull inflation hose from strut and LE valve- hold the base of valve while removing hose.



3. Remove neoprene click-valve cover.
4. Remove click-valve. Retain for later use if in good condition.

5. Cut new inflation tube to appropriate length- measure using old hose.

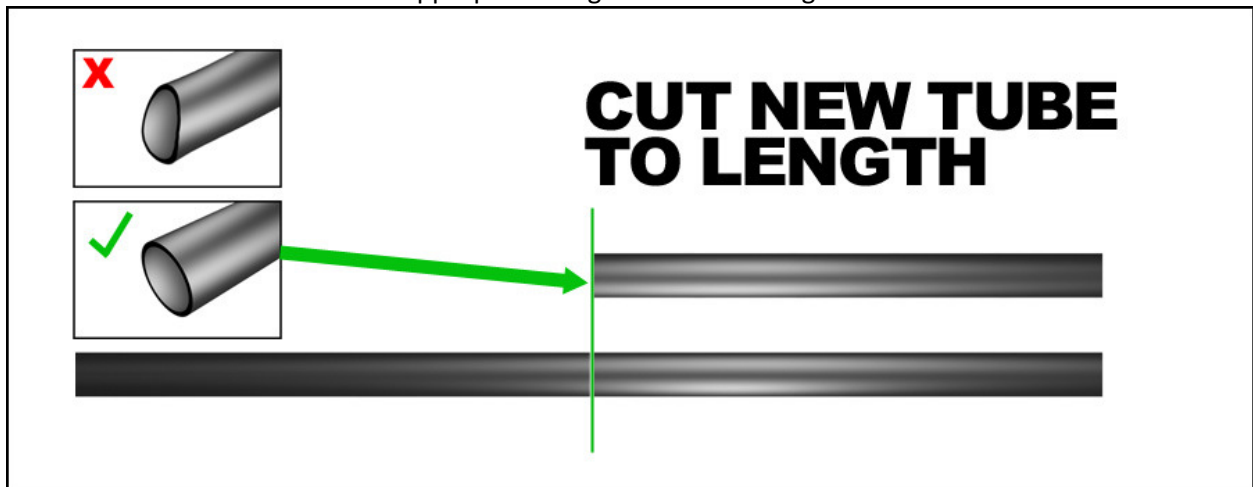


6. Slide click-valve onto new tube.

7. Slide neoprene cover over click-valve.

8. Form 2 zip-ties into 2 rings.


9. Slide zip-tie over each end of inflation hose.

10. Press hose firmly down onto EZ-valve on strut and LE- tube must sit flush with valve.

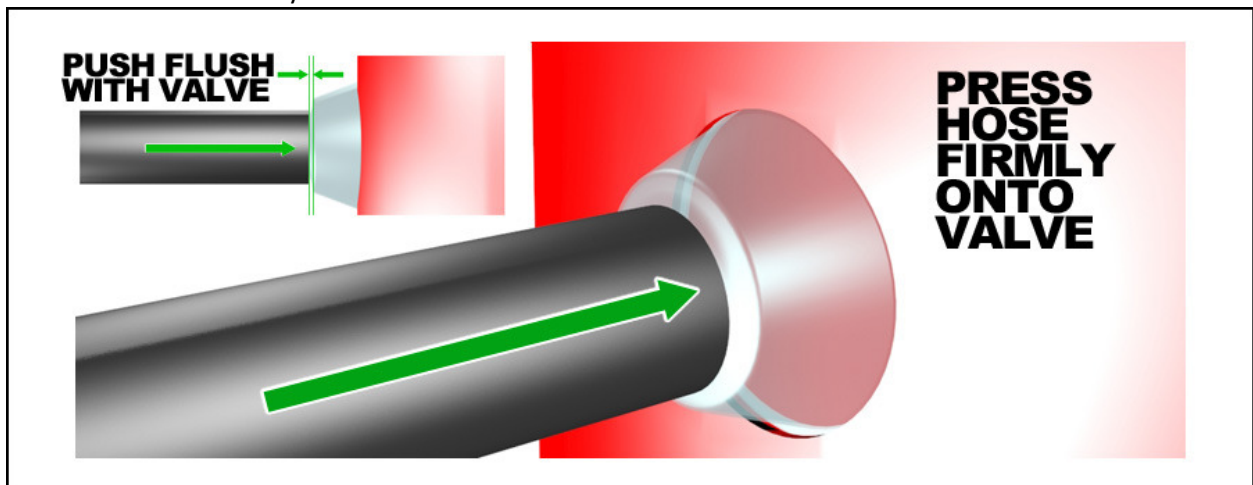

11. Locate zip-tie around centre of overlap between tube and EZ-valve.

12. Cinch up zip tie using pliers- repeat for other end of tube.

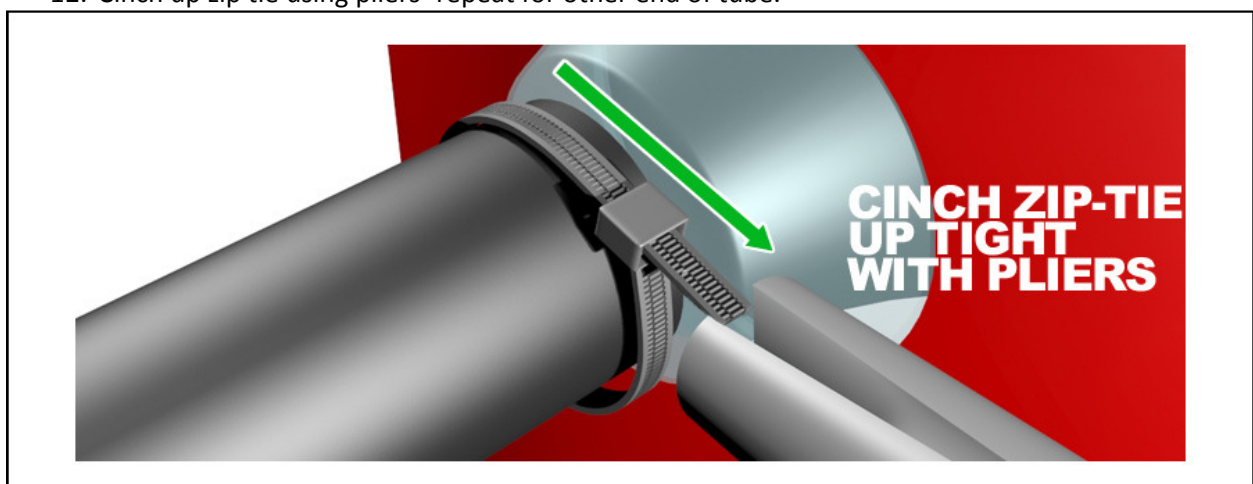

13. Inflate kite to normal pressure and use water to check new tube is airtight at both ends.

14. Go-kite.